



RCFM-230D

Room thermostat for fan-coil applications with on/off outputs and manual change-over.

Intended to control heating and/or cooling in 2-pipe installations. Setpoint and fan speed are set using the buttons on the front.

RCFM-230D is a thermostat for controlling heating and/or cooling in a room via on/off outputs. It also has a function for three-speed fan control (for fan-coil).

The controller uses 230 V AC supply voltage. It has triac outputs for 230 V AC heating/cooling and built-in 230 V AC fan relays, which means that a separate relay module is not required for the fan and actuators.

Applications

The thermostat is suitable in buildings where you want optimal comfort and reduced energy consumption, for example offices, schools, shopping centres, airports, hotels, hospitals etc.

Easy to install

Its modular design, featuring a separate bottom plate for wiring, makes the thermostat easy to install and commission. The bottom plate can be put into place before the electronics are installed. Mounting takes place directly on a wall or wall socket.

Control function

The thermostat controls heating and/or cooling in a room via on/off outputs. It has a settable hysteresis and the setpoint can be changed using the INCREASE (▲) and DECREASE (▼) buttons on the front.

See also the section "Display information and handling" on page 3.

Built-in or external sensor

The thermostat has a built-in sensor. Alternatively, the input for an external PT1000-sensor can be used.

On/off control outputs


RCFM-230D has outputs for control of e.g. 230 V AC on/off actuators.

Short facts about RCFM-230D

- Supply voltage 230 V AC
- On/Off temperature control, 230 V AC outputs
- Built-in relays for a 3-speed fan, 230 V AC
- Inputs for presence detector and/or window contact
- Manual change-over via button on the front panel
- Min- max supply air temperature limitation

2-pipe installations

In 2-pipe installations, the same pipe system is used for heating and cooling depending on the current season. Chilled water circulates through the system during summer and heated water during winter RCFM-230D is intended for control of 2-pipe systems. Output DO4 is used for controlling heating or cooling (depending on the manual change-over) via an actuator, a valve or similar (change-over function).

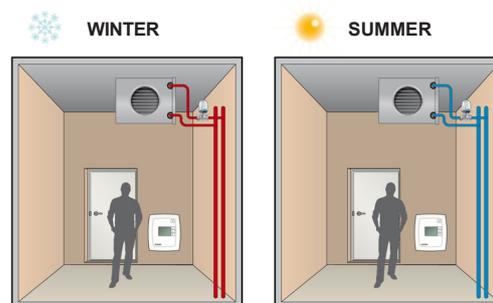

Manual change-over cooling/heating

The thermostat has manual change-over. By pressing the "M"-button on the front, the thermostat will be set to operate with heating or cooling function.

At heating function "HEAT" is shown in the display and at cooling function "COOL" is shown.

Occupancy detection for saving energy

By connecting an occupancy detector or a keycard switch (in hotels) to a digital input, you can alternate between Comfort and Economy mode. This way, the temperature is controlled from requirement, making it possible to save energy while maintaining the temperature at a comfortable level.

Using occupancy detection, you can delay activation and/or inactivation of Comfort mode to avoid switching mode if someone temporarily enters or leaves the room.

A window contact can be connected to digital input 1. The window contact will set the thermostat to "Off" mode if a window is opened, thereby minimising energy consumption.

Operating modes

There are four different operating modes, Comfort, Economy (Standby), Off and Window. Switch-over between these modes is performed locally.

Comfort: \uparrow is shown in the display and the room is in use. The temperature is held at the comfort level with a deadband (DB) between activation of heating and cooling.


Economy (Standby): "Standby" is shown in the display. The room is in an energy saving mode and is not used at the moment. This can for example be during nights, weekends, evenings etc. or during daytime when there is no one in the room. The thermostat is prepared to change operating mode to Comfort if someone enters the room. Heating and cooling have freely adjustable setpoints.

Off: "Off" is shown in the display and the backlight is switched off. The thermostat neither heats or cools and the fan stops (except if mould protection has been selected, in which case the fan will keep running). Off mode is selected by pressing the fan button until "Off" is shown in the display and the backlight is switched off.

Window: \square is shown in the display, the thermostat is in off mode and the fan stops (except if mould protection has been selected, in which case the fan will keep running).

Fan speed control

The current fan speed is shown in the display and can be set manually to Low→Medium→High→Auto by pressing the fan button. In Off mode, the thermostat will shut down. In Auto mode, fan speed is controlled by the difference between the setpoint and actual value of the room.

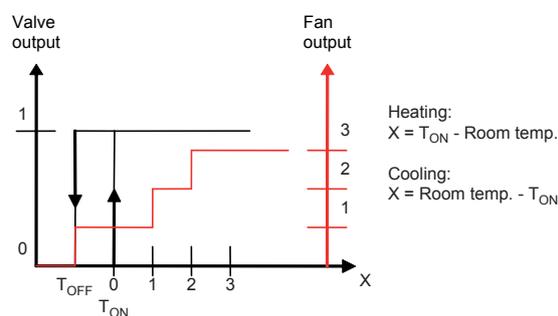

When there is no heating or cooling demand in the Auto position, the fan will run at its lowest setting. This can be changed to make the fan stop when there is no heating or cooling demand. The fan is also deactivated when in modes Off and Window. However, it will continue to run if mould protection has been configured.

If the fan has been configured to not be affected by controller output, the "AUTO" option will not be shown when pressing the fan button.

Mould protection


When this function has been configured, the fan will run at a minimum of the lowest speed setting, circulating air in the room so as to minimise the risk of mould growth in the fan-coil unit. The function is deactivated on delivery.

Automatic valve exercise

To ensure proper functionality, the thermostat has a function for valve exercise, even during periods when they are not in use. At regular intervals the output is overridden to close for a moment in order to open and close the valves. The exercise interval can be set individually for heating and cooling. The exercise function can also be inactivated if desired.

Display information and handling

The display has the following indications:

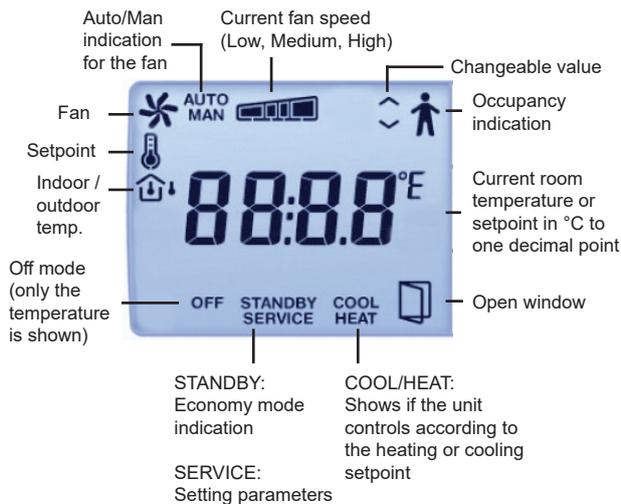

The display is handled using the buttons on the thermostat:



Fan button

By pressing the fan button, you set the fan speed to Low, Medium, High, Auto and Off. In Off mode, the control function is also inactivated.

Blocking

The buttons of the controller, the configuration menu and the manual fan control can all be blocked in order to prevent settings from being changed by unauthorized individuals.

Setpoint buttons

The INCREASE and DECREASE buttons are used to change the setpoint value. The basic setpoint can be changed within adjustable min./max. limits.

Button for manual change-over (M-button)

By pressing the "M"-button, the running mode for the change-over function will be set to operate with heating or cooling function.

Configuration via the parameter list

The factory settings are changed in the parameter list shown in the display by using the buttons on the thermostat.

The parameter values are changed with the INCREASE and DECREASE buttons and changes confirmed with the fan button.

The parameter list can be found in the instruction for RCFM-230D and in the manual for RCF.

Display configuration


The desired contents of the display can be configured via the parameter list. There are four alternatives:

1. The actual value is normally shown. The setpoint displacement is shown when it is changed using the INCREASE and DECREASE buttons.
2. The actual value is normally shown. The setpoint displacement is shown when it is changed using the INCREASE and DECREASE buttons.
3. The setpoint value is shown (factory setting).
4. The setpoint adjustment is shown.

Control principles


Control principle at cooling function

During control of cooling, the output is activated when the temperature rises above the setpoint by the set hysteresis. The output closes when the setpoint value is reached.

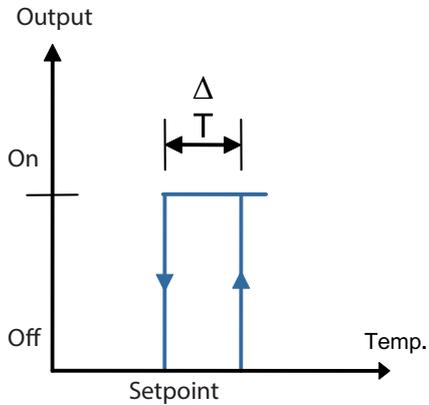

Control principle at heating function

During control of heating, the output is activated when the temperature falls below the setpoint by the set hysteresis. The output closes when the setpoint value is reached.

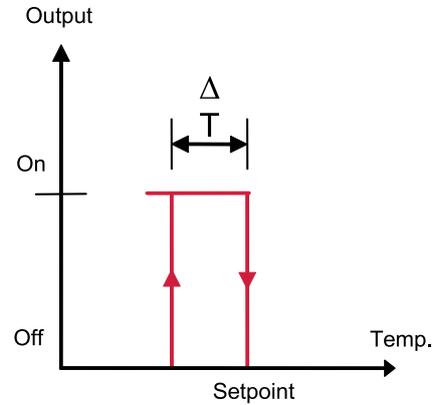

Supply air temperature limitation

AI1 can be configured for use with a supply air temperature limitation sensor. A room controller will then work together with a supply air temperature controller using cascade control, resulting in a calculated supply air temperature maintaining the room temperature setpoint. It is possible to set individual min/max limitation setpoints for heating and cooling. Settable temperature range: 10...50°C.

Technical data

Supply voltage	230 V AC \pm 10 %, 50/60 Hz
Power consumption	3 W, class II construction
Type of installation	2-pipe
Ambient temperature	0...50°C
Storage temperature	-20...+70°C
Ambient humidity	Max. 90 % RH
Protection class	IP20
Pollution degree	2
Overvoltage category	3
Display	LCD with backlight
Built-in temperature sensor	NTC type, measuring range 0...50°C
Terminal blocks	Lift type for max. cable area 2.1 mm ²
Material, casing	Polycarbonate, PC
Colour	
Cover	Polar white RAL9010
Bottom plate	Light grey
Mounting	Indoor, wall mounting, fits on a standard wall socket
Dimensions (HxWxD)	120 x 102 x 29 mm
Weight	0.18 kg
	This product carries the CE mark. For more information, see www.regincontrols.com .

Inputs

External sensor, AI1	PT1000-sensor. Suitable sensors are TG-R5/PT1000, TG-UH/PT1000, TG-A1/PT1000 and TG-K3-PT1000 from Regin.
Occupancy/window contact, DII	Potential free contact. A suitable occupancy detector is IR24-P from Regin.

Outputs

Fan control, DO1, 2, 3	3 outputs for speed I, II and III, 230 V AC, max. 3 A fan-coil
Valve, DO4	230 V AC, max. 300 mA (3 A initially)


Settings

	Possible settings	Factory setting (FS)
Basic setpoint	5...50°C (0...100°C with Regio tool®)	22°C
Internal sensor calibration	-10...10 K	0 K
External sensor calibration	-10...10 K	0 K
Hysteresis	0.5...50 K	1 K
DB, deadband at Comfort	0.1...10 K	2 K
Input DII	Normally open (NO) or normally closed (NC)	NO
Output DO4	NO or NC	NC
Valve exercise	Individually settable for heating and cooling outputs	23 hours interval

Wiring and dimensions

10	L	230 V AC L	Supply voltage
11	-	Not connected	
12	N	230 V AC N	Supply voltage (internally connected to terminal 13)
13	N	Fan-coil common / 230 V AC N	Common fan-coil connector (internally connected to terminal 12)
20	DO1	Fan-coil output 1 for fan control	Relay, 230 V AC*, 3 A
21	DO2	Fan-coil output 2 for fan control	Relay, 230 V AC*, 3 A
22	DO3	Fan-coil output 3 for fan control	Relay, 230 V AC*, 3 A
30	NC	Not connected	
31	DO4	Digital output 4 for heating/cooling	Digital output. 230 V AC, max 300 mA. Max. 2 A during 20 ms.
32	CDO45	Common DO4 & 5	Common connection for digital outputs 4 and 5
33	-	Not connected	
40	DI	Digital input	Floating (potential-free) window contact or occupancy contact. Configurable for NO/NC.
41	Agnd	Analogue ground	
42	AI	Analogue input	PT1000, external room sensor or supply sensor
43	-	Not connected	
44	Agnd	Analogue ground	
50-52	-	Not connected	
53-54	-	Reserved for future use	

*The sum of the current through DO1-DO3 is protected by a fuse

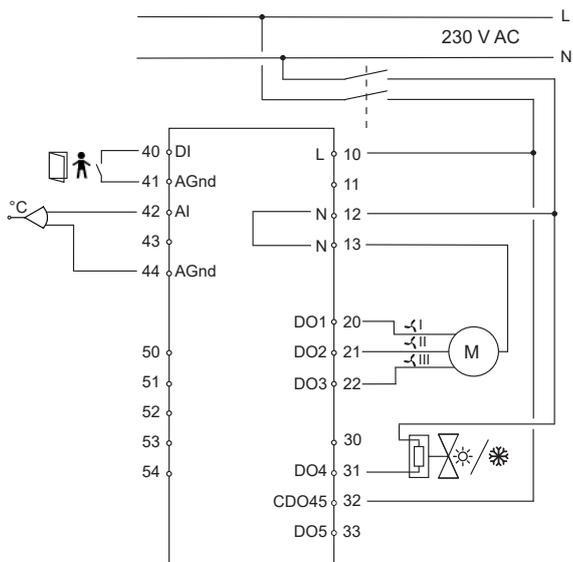

Product documentation

The documents can be downloaded from www.regincontrols.com.

Head office Sweden

Phone: +46 31 720 02 00

Web: www.regincontrols.com

Mail: info@regin.se